

# Power Injector Installation Guide

The purpose of the Power Injector is to provide power to BAD BOY Wi-Fi devices via Power-Over-Ethernet (POE). It does this by using the spare wires of the ethernet cable. The voltage injected is 12Vdc.

- Check off items when completed.

## Step 1

- Connect one end of your BAD BOY cable into your BAD BOY Wi-Fi device. Refer to your device's Installation Guide.

## Step 2

- Connect the other end of the cable to the POE socket of the Power Injector. See illustration. The Injector you have may vary from that shown.

## Step 3


- Connect a patch cable (included) into the LAN socket of the Power Injector. See illustration. The Injector you have may vary from that shown.

## Step 4

- Connect the other end of the patch cable into your computer's ethernet port.

## Step 5

- Connect AC power using a power cord into the back of the Power Injector and a convenient wall socket.

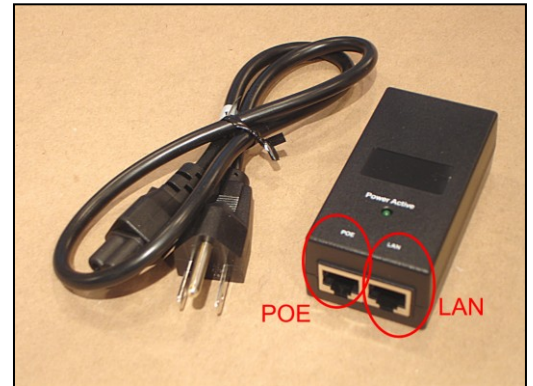

## Step 6

- Observe that the power LED is illuminated on both the Power Injector and the connected BAD BOY Wi-Fi device.

## Step 7

- Refer to your device's Quick Start Guide for getting up and running. Surf the web to verify your BAD BOY Wi-Fi device and cabling is operating correctly.

**Congratulations, you're finished!**

